

ARC ADJUSTMENTS

All I-40/41 group adjustable heads are preset to approximately 180°. Sprinklers may be adjusted with water on or off. It is recommended that initial adjustment be made before installation.



1. Using the palm of your hand, rotate the nozzle turret counterclockwise to left stop to complete any interrupted rotation cycle. (Fig. 1).
2. Rotate the nozzle turret clockwise to right stop. This is the fixed side of the arc. The nozzle turret must be held in this position for all arc adjustments.

To Increase Arc

1. Insert the key end of the Hunter wrench into the adjustment socket (Figs. 2 & 3).
2. While holding the nozzle turret at the right stop, turn the wrench clockwise. Each 360° turn of the wrench increases the arc 45°.
3. Adjust to any arc between 40° and 360°.
4. Wrench will stop turning, or there will be a ratcheting noise, when the maximum arc (360°) is reached.

To Decrease Arc

1. Insert the key end of the Hunter wrench into the adjustment socket (Figs. 2 & 3).
2. While holding the nozzle turret at the right stop, turn the wrench counterclockwise. Each 360° turn of the wrench decreases the arc 45°.
3. Adjust to any arc between 40° and 360°.
4. Wrench will stop turning, or there will be a ratcheting noise, when the minimum arc (40°) is reached.

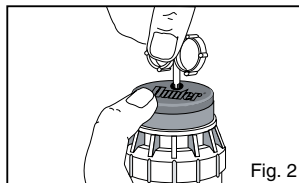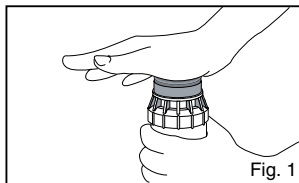

Radius Adjustment



Insert the hex end of the Hunter wrench into the nozzle-retainer/range-adjustment screw (Figs. 2 & 3). Turn the screw clockwise into the stream of water to decrease the radius, or counterclockwise to increase the radius.

Precipitation Rate Adjustment

Where excessively wet or dry areas are a problem, the precipitation rate may be adjusted. Simply replace the existing nozzle with a larger one to increase, or a smaller one to decrease the rate of precipitation.

Nozzle Installation

1. Insert the key end of the Hunter wrench into the lifting socket of a pop-up sprinkler. Pull the riser up to gain access to the nozzle socket.
2. Using the Hunter wrench, loosen the nozzle-retainer/range-adjustment screw. If a nozzle is already installed in the sprinkler, it may now be removed by briefly turning on the water.
3. Discard nozzle if removed with pliers. Slip the desired nozzle into the nozzle socket. Note that the socket is angled up 25° (see Fig. 4). Tighten the nozzle-retainer/range-adjustment screw.

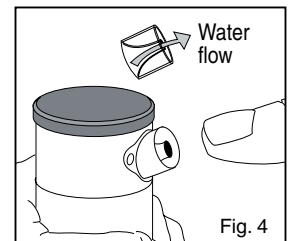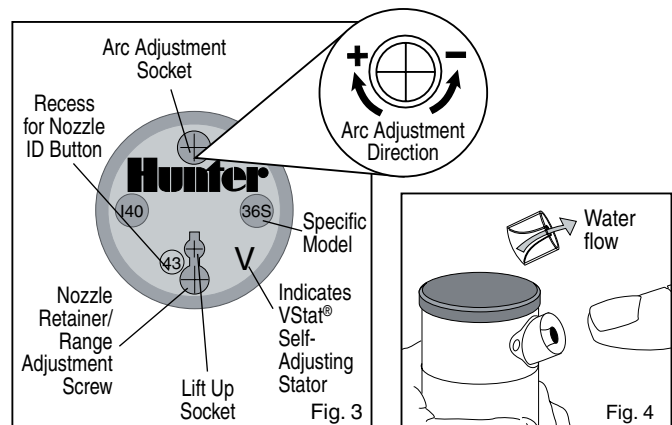

I-40 Nozzle Performance Data


Nozzle	Pressure PSI	Radius ft.	Flow GPM	Precip in/hr	
				■	▲
40	40	45'	7.0	0.67	0.77
	50	46'	8.0	0.73	0.84
	60	46'	8.5	0.77	0.89
41	50	50'	10.2	0.79	0.91
	60	51'	11.1	0.82	0.95
	70	52'	12.1	0.86	0.99
42	80	53'	13.0	0.89	1.03
	50	51'	11.0	0.81	0.94
	60	53'	12.3	0.84	0.97
43	70	55'	13.1	0.83	0.96
	80	56'	13.9	0.85	0.99
	50	56'	13.5	0.83	0.96
44	60	57'	15.1	0.89	1.03
	70	59'	16.1	0.89	1.03
	80	61'	17.5	0.91	1.05
45	60	63'	20.0	0.97	1.12
	70	65'	21.8	0.99	1.15
	80	66'	23.4	1.03	1.19
45	90	67'	24.9	1.07	1.23
	60	66'	22.7	1.00	1.16
	70	68'	24.7	1.03	1.19
45	80	69'	26.4	1.07	1.23
	90	70'	28.2	1.11	1.28

Note: All precipitation rates are calculated for 180 degree operation.
For the precipitation rate for a 360 degree sprinkler, divide by 2.


I-42 Nozzle Performance Data

Nozzle	Pressure PSI	Radius ft.	Flow GPM	Precip in/hr	
				■	▲
40	40	41'	7.0	0.80	0.93
	50	42'	8.0	0.87	1.01
	60	42'	8.5	0.93	1.07
41	50	44'	10.2	1.01	1.17
	60	44'	11.1	1.10	1.27
	70	45'	12.1	1.15	1.33
42	80	46'	13.0	1.18	1.37
	50	46'	11.0	1.00	1.16
	60	47'	12.3	1.07	1.24
43	70	49'	13.1	1.05	1.21
	80	50'	13.9	1.07	1.24
	50	51'	13.5	1.00	1.15
44	60	52'	15.1	1.07	1.24
	70	52'	16.1	1.15	1.32
	80	53'	17.5	1.20	1.38
45	60	58'	20.0	1.14	1.32
	70	58'	21.8	1.25	1.44
	80	60'	23.4	1.25	1.44
45	90	60'	24.9	1.33	1.54
	60	60'	22.7	1.21	1.40
	70	62'	24.7	1.24	1.43
45	80	64'	26.4	1.24	1.43
	90	65'	28.2	1.28	1.48


CORRECT INSTALLATION

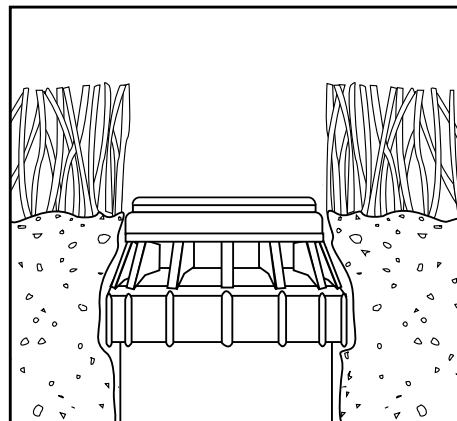

IDENTIFYING NOZZLE NUMBERS

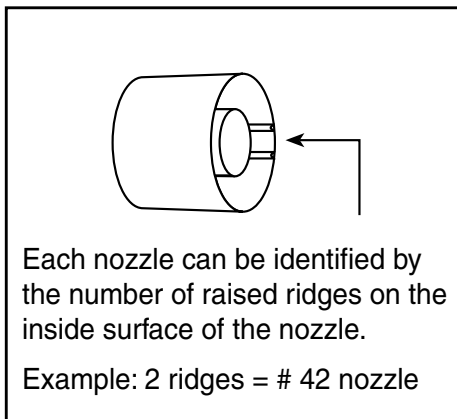

FULL CIRCLE ROTATION SPEED

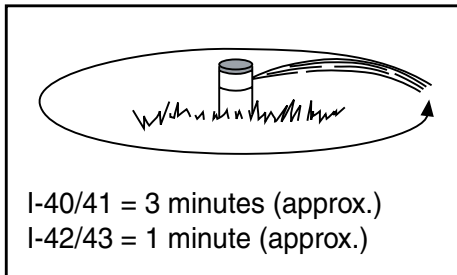

Data represent test results in zero wind. Adjust for local conditions.
Radius may be reduced up to 25% with adjustment screw (this may alter the uniformity of the spray pattern).

I-41 Nozzle Performance Data – Metric

Nozzle	Pressure Bars	Radius m	Flow m³/hr	Flow l/min	Precip mm/hr		
					■	▲	
40	2.5	248	13.4	1.52	25.4	17	20
	3.0	303	13.7	1.68	28.0	18	21
	3.5	352	14.0	1.80	30.0	18	21
	4.0	400	14.0	1.92	32.0	20	23
	4.5	448	14.0	2.03	33.8	21	24
41	5.0	496	14.3	2.13	35.5	21	24
	3.0	303	14.9	2.16	36.0	19	22
	3.5	352	15.2	2.33	38.9	20	23
	4.0	400	15.5	2.49	41.5	21	24
	4.5	448	15.5	2.64	44.1	22	25
42	5.0	496	15.8	2.79	46.5	22	26
	5.5	552	16.2	2.95	49.1	23	26
	3.0	303	15.2	2.37	39.4	20	24
	3.5	352	15.5	2.54	42.4	21	24
	4.0	400	16.2	2.71	45.2	21	24
43	4.5	448	16.5	2.87	47.8	21	24
	5.0	496	16.8	3.01	50.2	21	25
	5.5	552	17.1	3.17	52.9	22	25
	3.0	303	16.8	2.87	47.9	20	24
	3.5	352	17.1	3.11	51.8	21	25
44	4.0	400	17.4	3.33	55.6	22	26
	4.5	448	17.7	3.55	59.1	23	26
	5.0	496	18.0	3.75	62.4	23	27
	5.5	552	18.6	3.97	66.1	23	26
	4.0	400	19.2	4.47	74.4	24	28
45	4.5	448	19.5	4.75	79.1	25	29
	5.0	496	19.8	5.02	83.6	26	30
	5.5	552	20.1	5.31	88.5	26	30
	6.0	600	20.1	5.56	92.6	27	32
	6.5	648	20.4	5.80	96.6	28	32
45	4.0	400	20.1	5.07	84.4	25	29
	4.5	448	20.4	5.38	89.7	26	30
	5.0	496	20.7	5.68	94.7	26	31
	5.5	552	21.0	6.01	100.2	27	31
	6.0	600	21.3	6.28	104.7	28	32
6.5	648	21.6	6.55	109.1	28	32	

Note: All precipitation rates are calculated for 180 degree operation.
For the precipitation rate for a 360 degree sprinkler, divide by 2.

I-43 Nozzle Performance Data – Metric

Nozzle	Pressure Bars	Radius m	Flow m³/hr	Flow l/min	Precip mm/hr		
					■	▲	
40	2.5	248	12.2	1.52	25.4	20	24
	3.0	303	12.5	1.68	28.0	21	25
	3.5	352	12.8	1.80	30.0	22	25
	4.0	400	12.8	1.92	32.0	23	27
	4.5	448	13.1	2.03	33.8	24	27
41	3.0	303	13.1	2.16	36.0	25	29
	3.5	352	13.4	2.33	38.9	26	30
	4.0	400	13.4	2.49	41.5	28	32
	4.5	448	13.4	2.64	44.1	29	34
	5.0	496	13.7	2.79	46.5	30	34
42	5.5	552	14.0	2.95	49.1	30	35
	3.0	303	13.7	2.37	39.4	25	29
	3.5	352	14.0	2.54	42.4	26	30
	4.0	400	14.3	2.71	45.2	26	30
	4.5	448	14.6	2.87	47.8	27	31
43	5.0	496	14.9	3.01	50.2	27	31
	5.5	552	15.2	3.17	52.9	27	32
	3.0	303	14.9	2.87	47.9	26	30
	3.5	352	15.5	3.11	51.8	26	30
	4.0	400	15.8	3.33	55.6	27	31
44	4.5	448	15.8	3.55	59.1	28	33
	5.0	496	15.8	3.75	62.4	30	34
	5.5	552	16.2	3.97	66.1	30	35
	4.0	400	17.7	4.47	74.4	29	33
	4.5	448	17.7	4.75	79.1	30	35
45	5.0	496	17.7	5.02	83.6	32	37
	5.5	552	18.3	5.31	88.5	32	37
	6.0	600	18.3	5.56	92.6	33	38
	6.5	648	18.3	5.80	96.6	36	40
	4.0	400	18.3	5.07	84.4	30	35
45	4.5	448	18.6	5.38	89.7	31	36
	5.0	496	18.9	5.68	94.7	32	37
	5.5	552	19.5	6.01	100.2	32	36
	6.0	600	19.8	6.28	104.7	32	37
	6.5	648	19.8	6.55	109.1	33	39

Auckland NZ
PH: (09) 919 7600
FAX: (09) 919 7604

Distributed by: **aquaspec**
www.aquaspec.co.nz 0800 353 966

Christchurch NZ
PH: (03) 968 3230
FAX: (03) 968 3231